

[< Select a difference device](#)

ThinkCentre M70s Gen 6  
(12YJ,12YK,12YN,12YQ,  
13BQ,13BR)  
Graphics Mode

Simulators: 1640, BSC V4.1.0  
Lenovo ISS-KME Team  
Contributed by Zongquan, v2.0, 202  
5/05/20  
[Notice](#)

EXPORT



Setup Menu

- Main
- Devices
- Advanced
- Power
- Security
- Startup
- Exit



Startup

- > **Boot Priority Order**  
Use Up and Down arrows to select a device.  
<+> and <-> move the device up or down.  
<x> excludes/includes the device to boot.

**First Boot Device** Boot Order ▾

Select the first boot priority group. BIOS will try to boot from the group first before trying the boot order.

**USB Boot Support** Enabled ▾

This option is only for determining whether to support boot from USB storage devices and does not disable USB storage devices.  
<Enabled> The system supports boot from USB storage devices.  
<Disabled> The system does not support boot from USB storage devices.

**Boot Up Num-Lock Status** On ▾

This field indicates the state of the NumLock feature of the keyboard after Startup. If NumLock is "On", the keys on the keypad will act as numeric keys. If NumLock is "Off", the keys on the keypad will act as cursor keys.

**Fast Boot** Enabled ▾

This feature can record the last successful startup state to reduce the POST time at the next startup. It is recommended to turn off "fast boot" if you often use CD/DVD or network to load your operating system. Select "Enabled", system could start up faster. Select "Disabled" to switch back to normal boot.

**F1 Help** **Select Item** **+/- Change Values** **F9 Setup Defaults**  
**Esc Exit** **Select Menu** **Enter Select > Sub-Menu** **F10 Save and Exit**