

[< Select a difference device](#)

ThinkCentre M70s Gen 6
(12YJ,12YK,12YN,12YQ,
13BQ,13BR)

Graphics Mode

Simulators: 1640, BSC V4.1.0

Lenovo ISS-KME Team

Contributed by Zongquan, v2.0, 202
5/05/20

[Notice](#)

EXPORT

ThinkCentre®

Setup Menu

Home

Main

Devices

Sun

Advanced

Clock

Power

Shield

Security

Up/Down

Startup

Exit

Exit

Lenovo™

←

Network Setup

Onboard Ethernet Controller

Enabled

Select whether to enable or disable Onboard Ethernet Controller.
NOTE:
If this option is changed to "Disabled", the Intel(R) AMT related functions will be disabled.

Wireless LAN Access

Enabled

<Enabled> Enables use of Wireless LAN.
<Disabled> Disables use of Wireless LAN. Wireless LAN will not be available in OS.

Wireless LAN PXE boot

Disabled

Select whether to load Wireless LAN UNDI Driver to support wireless LAN PXE boot or https boot.

PXE IPV4 Network Stack

Enabled

Select whether to enable or disable PXE IPV4 network stack

PXE IPV6 Network Stack

Enabled

Select whether to enable or disable PXE IPV6 network stack

PXE Boot Wait Time

1 Second

Select PXE boot wait time before starting PXE boot. You can abort PXE boot by pressing ESC key during the wait time. After the wait time, PXE will start.

TFTP Window Size

4

Specify the MTFTP window size used by UEFI PXE driver.

HTTPs Boot

Disabled

The switch to enable custom HTTPs boot function. If enabled, the "HTTPs Boot Configuration" and "Tls Auth

F1

Help

Esc

Exit

↑↓

←→

Select Item

Select Menu

+/-

Change Values

Enter

Select > Sub-Menu

F9

Setup Defaults

F10

Save and Exit