

[< Select a difference device](#)

ThinkCentre M70s Gen 6
(12YJ,12YK,12YN,12YQ,
13BQ,13BR)

Graphics Mode

Simulators: 1640, BSC V4.1.0

Lenovo ISS-KME Team

Contributed by Zongquan, v2.0, 202
5/05/20

[Notice](#)

EXPORT

ThinkCentre®

Setup Menu

Main

Devices

Advanced

Power

Security

Startup

Exit

Lenovo™

←

USB Setup

USB Port Access

Enabled

Select whether to enable or disable USB (Universal Serial Bus) functions. If the functions are disabled,no USB device can be used.

USB Enumeration Delay

Disabled

If it is enabled, extra delay will be added when host performs USB enumeration. This may improve the compatibility of USB device detection but increase POST time.

Front USB Ports

Enabled

Select whether to enable or disable the Front USB ports.

USB Port 1

Enabled

Select whether to enable or disable the USB port 1.

USB Port 2

Enabled

Select whether to enable or disable the USB port 2.

USB Port 3

Enabled

Select whether to enable or disable the USB port 3.

USB Port 4

Enabled

Select whether to enable or disable the USB port 4.

USB Port 5

Enabled

Select whether to enable or disable the USB port 5.

Rear USB Ports

Enabled

Select whether to enable or disable the rear USB port .

USB Port 6

Enabled

Select whether to enable or disable the USB port 6.

USB Port 7

Enabled

Select whether to enable or disable the USB port 7.

F1 Help

Esc Exit

↑↓
←→

Select Item
Select Menu

+/-
Enter

Change Values
Select > Sub-Menu

F9
F10

Setup Defaults
Save and Exit

Copyright © 2025 Lenovo. All rights reserved.

https://download.lenovo.com/bsco/index.html#/graphicalsimulator/ThinkCentre M70s Gen 6 (12YJ,12YK,12YN,12YQ,13BQ,13BR)

1/1